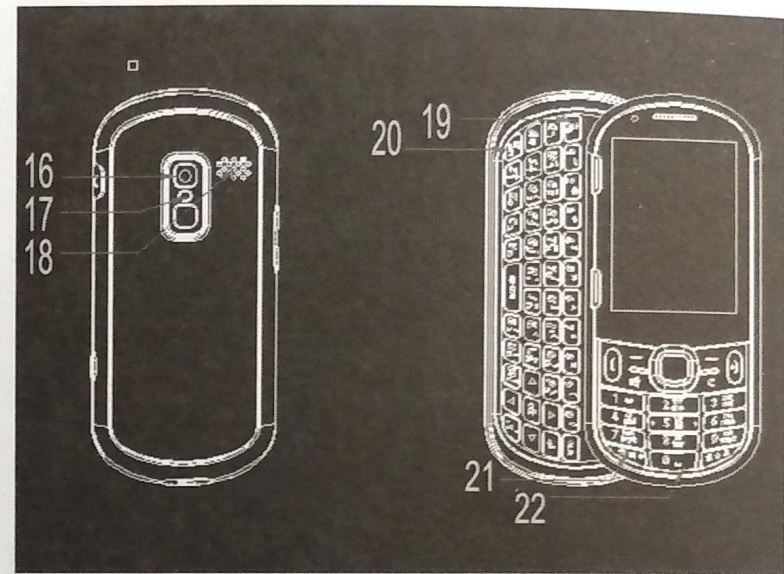 
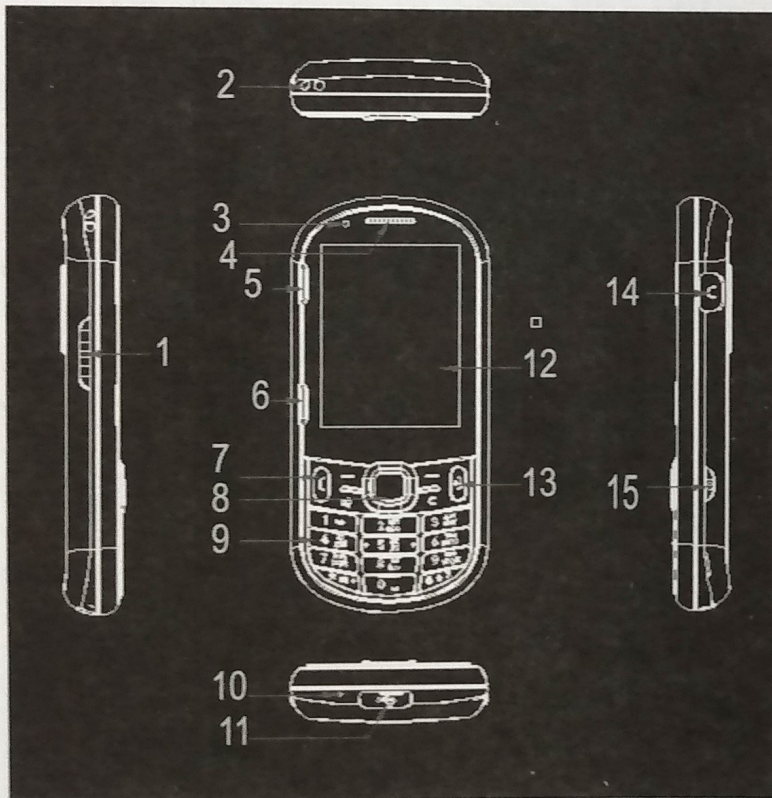 


HIT K1

Your mobile phone at a glance



➤ Symbols and the screen

1	Side volume keys: up volume up, down volume down
2	Lanyard hole: mobile phone safety lanyard
3	LED light: red light when charging; green light for missed calls and unread text messages
4	Receiver: call receiver
5	Menu key: The menu key when the slide is open
6	Back button: the back button when the slide is open

7	Answer key: call answer key / dial key
8	Directional navigation keys: up, down, left and right selection keys
9	Numeric keys: numeric keys/input method keys
10	Mike: Microphone
11	TYPE-C interface: charging/data transmission interface
12	LCD: 2.8 inch display screen
13	Power key: On-off/on-hook key
14	Headphone jack: 3.5 headphone jack
15	Camera key: camera shortcut key
16	Camera: 5MP camera
17	Flash: camera flash
18	Speaker: sound speaker position
19	FN key definition: 1, Short press the FN key to switch between Hebrew, English, uppercase, numbers, etc 2, Long press the FN key to realize the Talk to text function
20	Shift key definition: 1, Short press shift to switch upper and lower case letters

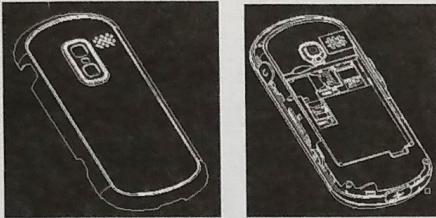 
	2, Long press shift+any key to call out the symbol (or long press any key to call up the symbol. Since the input symbol does not need to do special switching function, long press the button of a to achieve some symbols).
21	*KEY: Press *KEY first and then press OK to unlock
22	0 KEY: Multiplexing function, long press to clear background running programs

Table of Contents

1. Getting Started	5
2. Using the phone	6
3. Contacts	7
4. History	9
5. Messages	10
6. Camera	11
7. Photos	12
8. Media	13
9. Waze	13
10. Tools	13
11. Settings	14

Getting started

➤ Inserting a SIM card



- Remove the battery cover (You may use the cover opener that was supplied)
- Slide the SIM card (not supplied) into the SIM card holder with the gold contacts facing down
- (Optional) Slide your data card (MicroSD)
- into the card holder with the gold contacts facing down



➤ Inserting and charging the battery



- Insert the battery, making sure that the battery contacts touch the phone's gold contacts.
- Put the battery cover in place and press firmly.

➤ Turning on the phone




- Pressing the  key for 8-10 seconds switches the phone on.
- To turn off the phone, press and hold the  key again for four seconds, a shutdown prompt window will pop up, select "OK" to turn off the phone

1. Using the phone



➤ Using the menu



- Press the middle button  of the navigation key to enter the menu.
- Use the navigation key buttons or navigate through menu items. At the top of the

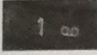 
screen, the currently highlighted menu item will be displayed.


- To return to standby mode, press the on-

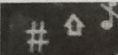 
hook key  or  to return to the standby screen

- **Dual-function keys**

Some keys have additional functions if they are pressed and held down for a few seconds:

 Key: Listen to voice mailbox

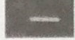 
 Key: + for country code, unlock the key combination to bring up the small mouse

 Key: Quick Switch between **General** mode and **Meeting** mode

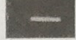 
2. Contacts

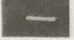 
Menu items: Add contact, Search name, Edit contact, Copy contact, Send messages to contact and Phonebook settings

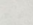 
- **Saving contacts (name and number)**

Left  button ⇒ **Add new contact** ⇒ **Options** ⇒ **Enter the contact info with keypad** ⇒ **Options** ⇒ Choose **Save** by pressing **Left button**.

- **Search for contacts**


Right  button ⇒ use keypad to search **contact**

⇒ choose Options by pressing **Left  button**

⇒ press  to select **Call, Send message, View details, Edit, Delete, Copy**, then press **Left button** to **Select**.

- **Speed Dial settings**


⇒ choose Options by pressing

 **navigation down key**

⇒ please **OK button**, Add shortcut number

- **Select all**

⇒ choose Options by pressing

 **navigation down key**

⇒ choose **Select all** click OK **Create new contact, Speed dial settings, Deselce all, Delete, Settings, Share, Link,**

➤ Settings

⇒ choose Options by pressing





navigation down key


⇒ **My info ,Default account for new contacts,Phoneetic name,Import,Export**

3. History


➤ Incoming call

- To answer: Open the phone, press 
- To reject: Press  or close the phone.




➤ Ending a call

- Press  or close the phone.


➤ Dialling a number

- Enter the number (incl. area code) you want to dial using the keypad
- Start the call by pressing 

➤ Redialling

- When the phone is on standby, press  to view your call history.
- Press  to select a number.
- Start the call by pressing .

➤ Hands-free / Speaker mode

- Press  **button** during a call to option and turn the Hands-free/Speaker function on or off.

4. Messages

Menu items: New message,Search,Settings,Cell broadcasts, Voice messages

➤ New message

Please # key to switch input method,

⇒ **Abc**

⇒ **abc**

⇒**ABC**

⇒**hebrew**

⇒**123**

When the phone slides off the full keyboard to enter a text message:

- Short press the FN key to switch between Hebrew, English, uppercase, numbers, etc
- Long press the FN key to realize the Talk to text function
- Short press shift to switch upper and lower case letters
- Long press shift+any key to call out the symbol (or long press any key to call up the symbol)

Green LED lights up when there are unread messages.

5. Camera

➤ **The captured photos are saved to the "DCIM" folder on the memory card or on the phone.**

- To open the camera, select the camera icon.
-

- Frame your shot inside the screen and keep your phone steady. Press the camera button or the OK button. After you hear the shutter sound, continue to hold the camera steady for one second.
- Immediately after shooting, you can choose to edit, share (via a compatible app), or delete your photo.
- If you choose to save or share, your picture will be saved to the Gallery app.

6. Photos

➤ **To view the pictures you've captured, as well as any you've stored on your memory card or the phone storage, go to photos menu :**

- To open Pictures, select Gallery icon.
- Depending on how many pictures you've stored, they may take a few minutes to load.
- If you've stored your pictures in folders on your Memory card, then the folders will display as separate

"camera". The top left album always contains all the pictures in all the albums.

- You can do the following while in Pictures.
 - View full-screen: Select a picture to open it in full-screen view.
 - Share a picture: In full-screen view, select Share. Select to share your picture via Messaging (MMS), or another application

7. Media

- **Multimedia has three menus, video player, music player, recording, you can choose the appropriate multimedia menu.**

8. Waze

- **Waze is a traffic navigation application that provides you with accurate location and road conditions, making your travel more convenient.**

9. Tools

- **The toolbox contains your commonly used auxiliary tools: Gmail, Smartlist, Alarm, Timer, Stopwatch, World clock, Notes, Flash light, Calcuator, Calendar, Notifications**
 - Gmail: Receive and send mail.
 - Smartlist: Online phonebook guide
 - Timer: Electronic reading tool
 - Stopwatch: Countdown
 - World clock: Global time
 - Notes: Text record
 - Flash light: Lighting tools
 - Calcuator: Ordinary calculator
 - Calendar: Set up a new schedule
 - Notifications: Notification list

10. Settings

- **Network & Internet**
 - Wi -Fi
 - Wi-Fi on/off: Select this check box if you prefer to use Wi-Fi for your data connection.
 - Wi-Fi settings: Open the Wi-Fi settings screen; select it from the network list. Provide your username or password if required.
 - Mobile network
 - You can open or close mobile data.
 - You can select you prefer network type.
 - Airplane mode

When airplane mode is selected, all wireless connectivity is off. This icon will display in the status bar when airplane mode is selected.

- **Connected devices**

- Bluetooth

- Bluetooth on/off: Use this check box to turn Bluetooth services on or off.

- Bluetooth settings: With Bluetooth services on, you can open the Bluetooth settings screen to:

- Rename your device.
 - Pair with one of the Bluetooth devices in range.
 - Rescan for devices.

- **Apps & notifications**

- Manage applications: View all the applications stored on your phone and how much space they occupy. Select a specific application to:

- 1. Clear your user data (if you have any associated with a particular application).
 2. You can give the APP some permission.
 3. Uninstall - If you've downloaded an application from Android Market, you will be able to uninstall it from this screen by selecting Uninstall.

- **Battery**

- You can turn on/off the percentage of charge, and then you will see the percentage of charge in the status bar.

- **Display**

- Brightness: Select to open the brightness control, and then slide your finger along the brightness bar to set the level. In sunlight, increase the level.

- Sleep: Select to decide how long your phone must be inactive before the screen turns off.

- **Sound**

- Volume: Select to open the volume control, and then slide your finger along the volume bar to set an incoming call ring volume or alarm, playing back music, videos.

- Ringtone: Select to decide on ringtone to use for incoming calls and Messages.

- Notification sound: Select a ringtone to use for a notification (e.g., new Calendar event notifications).

- **Storage**

- View and manage the data storage on your phone.

- Removable SD card: Monitor and manage the use of your SD card from this screen:

- 1. View how much space you are using on your memory card.
 2. Select to use your memory card as USB mass storage when your phone is connected to your computer.
 3. Eject your SD card from your phone.

- Note that when your phone is connected to your computer via USB, you cannot view

pictures or play any media stored on the card from your phone.

Internal device storage: Reports how much internal storage is free.

- **Security & Location**

SIM card lock settings: Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN, you can obtain it from your wireless operator.

Visible passwords: Select to have your password display as you type it.

Unknown sources: Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Android Market. To ensure your personal data and phone remain secure; it is recommended you not select this check box.

My Location: Select a source for determining your location: Wireless networks, or GPS satellites. Typically GPS will be more accurate (to street level) but it consumes more battery power.

- **Accounts**

You can add account to synchronize your syncdata.

- **System**

Language & input

You can choose language & input methods according to your habit.

Date & time

Set time, time zone, and date: Use Automatic unless you need to override the network values.

Time format: Select from 12 or 24 hour formats.

System data

Android 8.1.

Reset options

You can select to reset your phone to factory settings. This will erase all your data from the phone and require you to sign in and go through the set-up screens to use any of the applications.

About phone

View your phone Status: This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any WLAN addresses you're connected to, and more.

View the model number and version information for your phone.